



iGAUGE OPERATING INSTRUCTIONS

The iGAUGE is an accessory for the iCHARGE Model 6, which enables the user to charge the battery, and/or to measure the capacity of a two-way radio battery.

Basic iGauge functions

1. **Charge a Battery**
This will initiate a normal charge cycle only. (No capacity measurement)
2. **Capacity Cycle**
Discharge a battery, then recharge it, displaying the battery's discharge capacity in milliamp-hours. (mAH)
3. **ReActivate Cycle**
Discharge/Charges a battery three times, displaying the 3 discharge capacities, in mAH.

IGauge functions may be selected as follows

1. Mount a battery on the charger position containing the iGAUGE monitor.
(NOTE: Prior to mounting a battery, a language may be selected by pressing *NEXT*, until the desired language is reached, then pressing *SELECT*)
2. Observe the display announcing—"Charging in 29, 28, 27, ect..seconds." The display is counting down the time until it will commence a normal charge cycle if no selection is made.
(NOTE: The selection must be made before the count reaches zero, after which the normal charge cycle is started.)
If a selection is not made in time, simply remove the battery, then replace it and the process will commence again.
3. During the countdown, press the *NEXT* button, until you reach your selection.
4. When your selection (*Capacity or ReActivate*) appears in the display window, press the *SELECT* button.

The measurement process you select will begin automatically, and the display will show "Discharging", if you select *Capacity*, or "Discharging 1" if *ReActivate* was selected.

For additional information please contact:
Advanced Charger Technology, Inc.
5500 McDonough Drive, Bldg. Ste. 130 Norcross, GA 30093
(770) 263-6337
www.actcharge.com